

JOB PROCESSING

A quick guide



STEP 1

Download from **Cabinetry.Online** and import into **WoodCAM**

1. In Cabinetry.Online, open the job and click **Download Job CSV** on the job page.
2. Move or copy the downloaded CSV into the **Cabinetry.Online Import** folder.
3. Open WoodCAM and select the **Cabinetry.Online Import** tab at the top of the program.
4. Choose the job from the pop-up list of available CSVs and click **OK**, then **Import**.
5. Wait for 'File Importing is complete, Press [Close] to Exit' and click **Close** – the job now appears in WoodCAM.

Watch
Cabinetry.Online
Video Tutorial



Watch
WoodCAM
Video Tutorial



STEP 2

Process the job in **WoodCAM > CADCode**

Quick Export (default path)

1. Click **Export** (top right of WoodCAM).
2. Watch the progress window (bottom right) until it finishes.
3. CADCode launches automatically with the job loaded.

Watch
CADCode
Video Tutorial



STEP 3

Process the job in **CADCode**

CHECK THE PARTS (optional but recommended)


1. In the Control Panel, double click a material type to expand it.
2. Double click **Programs** to list all parts for that material.
3. Click a part to review its dimensions, drill locations/sizes and routing locations.

RUN THE NEST


1. Click the dual-triangle icon (facing right) > **Process All Packages**.
2. The **Progress** tab analyses the parts and nests them.
3. The **Results** tab shows the finished layout and yield % per sheet.
4. Click **Pattern** to view the full-screen nesting layout for each sheet before sending to the machine.

STEP 4


Finding the **CNC job file**

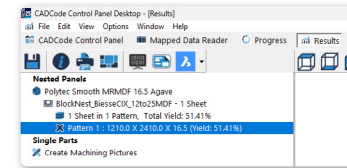

Double left click the **Pattern** to expand options below the pattern.

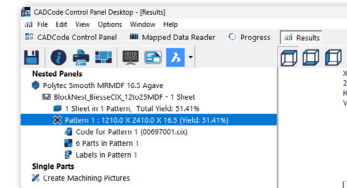

Right click **Code for Pattern** to find the machine code.

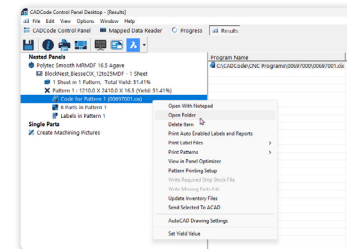

Repeat per sheet: this only opens the file for the sheet you right-clicked, so do it for every sheet being cut.

STEP 5

Printing reports in **WoodCAM**

Two report types, same workflow:

1. Go to **Reports** in WoodCAM and select report.
2. Choose **Job Hardware Listing Summary** for hardware requirements, or **Job Costings Summary** for job costs.
3. For all other reports, **Confirm Job No.** top left corner of WoodCAM. Click **OK**.
4. Click **No** (declines export).
5. Report opens with full breakdown.

For further support
**VISIT OUR
SUPPORT PORTAL**

